








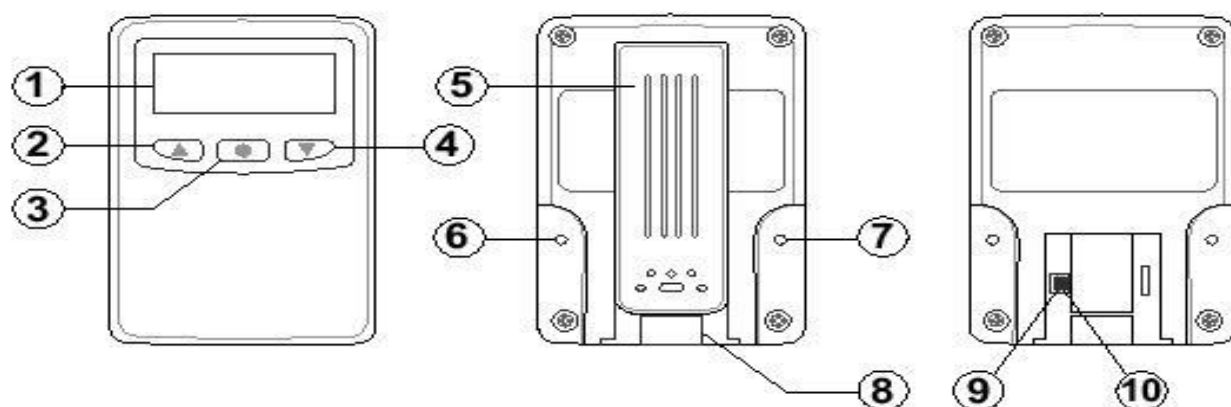


User Manual

Device Overview



No.	Item	Description
1	LCD display	6 icons & 4 x 7-segment LCD display
2	Up key	Navigate to previous call
3	ACK key	Acknowledgement
4	Down key	Navigate to next call
5	Belt clip	To clip the pager
6/7	Charging contact	Contact the cradle charging plates
8	Belt clip release latch	Push down on the latch and remove the belt clip
9	Switch 2	Pairing switch
10	Switch 1	Power switch

LCD Icon Overview

Icon	Description
	Caller icon: Manager
	Caller icon: Bar
	Caller icon: Table
	Caller icon: Kitchen / Take Away
	Sound and vibration alert Vibration only when icon is off
	Battery low
	Device ID of the caller


LCD Backlight Overview

Backlight	Description
Solid Green	Fully charged, or pressing keys to view the call log.
Flashing Red	Charging in the cradle
Flashing Red Fast	Not paired with the Master transmitter
Solid Red	Receiving call, or indicating defective battery if the pager is charging in the cradle.


Powering On the Pager

To power on the pager:

1. Remove the belt clip.
2. Move Switch 1 to the ON position.

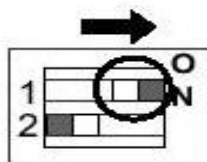


3. After powering on, the LCD will display ---- before entering power saving mode.

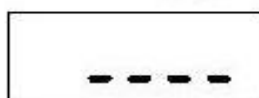


To power off the pager:

1. Remove the belt clip.
2. Move Switch 1 to the OFF position.

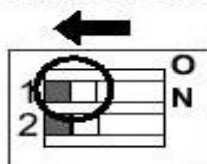

Note: Power off the pager if not in use for over a month.


Charging the Pager

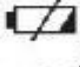When the battery level is low, the icon  will appear on the LCD; together with vibration and sound alert if sound is enabled. The pager will be turned off automatically when the battery level reaches critical low.

To charge the pager:

1. Connect the AC/DC adaptor to the power connector of the charging cradle.
2. Plug the AC/DC adaptor into a suitable power socket. The cradle power LED will turn green when power is supplied to the cradle.

3. Insert the pager to the charging slot. The pager LCD backlight will flash red while charging, and then it will turn green when fully charged.

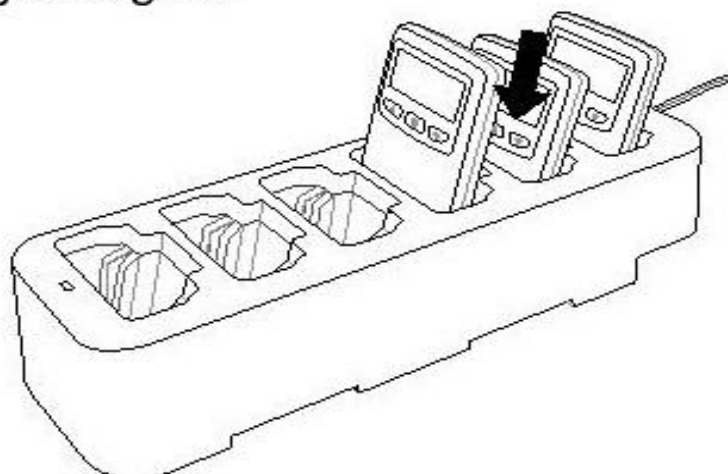

Note:

- The pager will not accept any calls during charging. The LCD will display the **Device ID** only.
- When removing from the cradle, the pager will vibrate if the battery level exceeds 80%.
- Replace the battery if LCD backlight shows solid red during charging.

Pairing the Pager


All pagers will need to be paired with the Master transmitter before they can be operated in the system.

To pair a pager with the Master transmitter:

1. Press and hold the Up and Down keys for 5 seconds. **PAIR** will be shown upon entering the pairing mode.
2. On the Master transmitter, input the command ***15*<Device ID>#** to pair and assign Device ID.
3. **Oper. OK** will appear upon completing the pairing. The pager will exit the pairing mode automatically.

Note: Moving Switch 2 to the ON position will also enable pairing mode. Switch to the OFF position after

pairing.

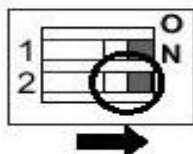

- Only one device can pair with the Master transmitter at a time. Avoid having multiple pagers in pairing mode simultaneously.
- **Device ID** is the number assigned to a pager. For example, input the command ***15*4#** will pair and assign a pager with **Device ID 4**.
- Pager and Take Away cannot assign with the same **Device ID**.

Unpairing the Pager

To unpair a pager:

1. Input the command ***25*<Device S/N>#** on the Master transmitter.
2. Perform factory reset on the pager to remove it completely from the system.

Note: **Device S/N** is shown on the product label.

Receiving Calls

Upon receiving an incoming call:

1. The pager will display the caller information with red LCD backlight and vibration alert.
2. Press the ACK key to acknowledge the call and stop the alert.

Note:

- Each transmitter role has a different vibrating pattern.
- The sound alert is disabled by default.

Viewing Call Records

The pager will store up to 20 calls in the call log. Older records will be discarded automatically.

The **Caller icon** and **Device ID** will be displayed in each call record. The below example shows Kitchen 0001.



To navigate the call log:

1. Press ACK key to view the latest call if the LCD screen is off.
2. Press Up or Down keys to navigate the call records.

Note:

- When reaching the top or bottom of the call log, LCD will display ---- for a short duration.
- Call log will be cleared after powering off.

Changing Settings

Changing Call Alert Setting

Single alert: Alert once for an incoming call. Single alert is enabled by default.

Reminder alert: If ACK key is not pressed for an incoming call, the alert will repeat up to 5 times in 30-second intervals.

To change the call alert settings:


1. Press and hold the ACK and Down keys for 5 seconds to toggle between **Single alert** and **Reminder alert**.
2. Release the keys upon receiving single or double vibrating alert to set **Single alert** or **Reminder alert**.

Changing Sound Alert Setting

Sound alert is disabled by default. Once enabled, a sound alert will appear in the following events:

- Receiving an incoming call
- Reaching battery low
- Charged above 80% when removing from the cradle
- Changing call alert setting

To change the sound alert setting:

1. Press and hold the ACK and Up keys for 5 seconds to enable or disable the sound alert.
2. The sound icon  indicates the sound alert is enabled. No icon will be shown if disabled.

Restoring Factory Default

To reset a pager to factory default:

1. Enable pairing mode on the pager.
2. Input the command ***85#** on the Master transmitter.

Verifying a Pager Connection

To send test calls to a pager, input the command ***75*<Device S/N>*<Period>#** on the Master transmitter where **Period** is the time interval defined in seconds.

Upon receiving a test call, a pager will show 0001 with no caller icon; together with the vibration and sound alert set.

To stop the test calls, input ***75*<Device S/N>*<0>#** or simply turn off the Master transmitter.

Cleaning the Device

To clean the device:

1. Power off the device.
2. Dampen a soft clean cloth with 75% alcohol, or diluted dish washing liquid; and wipe the surfaces of the casing.
3. Dip a cotton bud in 75% alcohol, and use it to clean the contact plates.
4. Let the device air-dry, and then power on the device.

Note:

- Do not use Isopropyl alcohol, strong alkaline or acid cleaning agent to clean the device.
- Do not pour alcohol or diluted dish washing liquid directly onto the device.
- Do not wipe the device with a wet cloth.

Specification

Item	Description
Frequency band	433.05MHz - 434.79MHz
Operating channels	8 channels
LCD display	6 icons and 4 numeric digits
Backlight	2 bi-colour LEDs (Green/ Red)
Keys/ Switches	Up, Down, Ack keys. 1 x Pairing switch, 1 x Power switch
Audio	Buzzer. 4 sound alert patterns
Vibrator	4 vibrating alert patterns
Antenna	Internal antenna
Call log	20 entries
Battery	Lithium battery 670mAh
Charging	By charging cradle (CSC-01)
Battery life	Operating time: 24 hrs Standby time: 175 hrs
Dimension	80mm x 52.5mm x 24.5mm
Weight	54g
Operating temp.	0°C to 45°C
Storage temp.	-20°C to 60°C
Operating humidity	20% - 80% non-condensing
Storage humidity	10% - 95% non-condensing